


**DESCRIPTION:** #90-86XX  
Installation of Air Sensor Assembly with Button & 20' Tubing

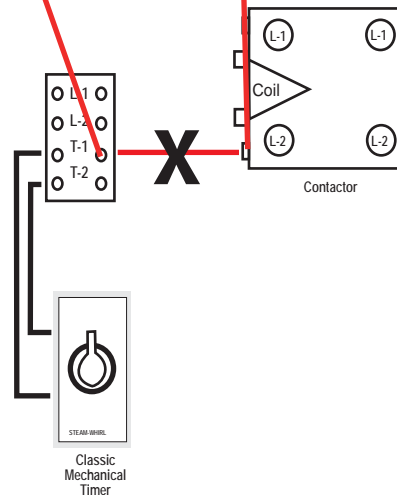

1. Drill 1-3/8" hole inside steam room and install air button, running air hose from back of air button to nipple on air sensor assembly.
2. Enlarge knockout hole in the top of generator enclosure to attach air sensor assembly (nipple out/wire in).
3. Remove red wires from T-1 on terminal block to L-2 on contactor.
4. Install wire from air sensor assembly, top red wire to T-1 on terminal block and bottom red wire to L-2 on contactor.
5. Wall timer must be turned on in order for air button to activate steam generator.

**READ AND SAVE THESE INSTRUCTIONS**